



NEXCOM International Co., Ltd.

Intelligent Platform & Services Business Unit

Digital Signage Platform

NDiS B535

User Manual

CONTENTS

Preface

Copyright	iv
Disclaimer	iv
Acknowledgements	iv
Regulatory Compliance Statements	iv
Declaration of Conformity	iv
RoHS Compliance	v
Warranty and RMA	vi
Safety Information	viii
Installation Recommendations	viii
Safety Precautions	ix
Technical Support and Assistance	x
Conventions Used in this Manual	x
Global Service Contact Information	xi
Package Contents	xiii
Ordering Information	xiv

Chapter 1: Product Introduction

Overview	1
Key Features	1
Physical Features	2
Front Panel	2
Rear Panel	2
Hardware Specifications	3
Mechanical Dimensions	4

Chapter 2: Jumpers and Connectors

Before You Begin	5
Precautions	5
Locations of the Jumpers and Connectors for NDiB B535	6
NDiB B535	6
Top View	6
Bottom View	7
Jumper Settings	8
Jumpers	9
RTC Clear Jumper	9
COM4 RI Voltage Select	9
Connector Pin Definitions	10
External I/O Interfaces - Front Panel	10
Power Button	10
LED Connector	10
Reset Button	11
COM1 to COM4 Connectors	11
USB 3.0 Ports	12
External I/O Interfaces - Rear Panel	13
DC Jack Connector	13
HDMI Connectors	13
USB 3.0 Ports	14
LAN Connectors	14
Audio Connectors	15
Internal Connectors	16
USB Connectors	16

SIM Card Slot.....	16
Debug 80 Port Connector	17
SATA Connector (7-pin and 15-pin).....	17
Battery Connector.....	18
GPIO	18
FAN Connectors.....	19
COM3 & COM4 Connectors (Co-layout with J5 & J4).....	19
Line-in.....	20
DC-in Power Connector (Co-layout with CN6).....	20
M.2 2230 E-Key.....	21
M.2 2242/2280 M-Key.....	22
Mini-PCIe Connector (Bottom)	23

Save & Exit	59
-------------------	----

Appendix A: Watchdog Timer.....60

Chapter 3: System Setup

Removing the Chassis Cover	24
Installing SO-DIMM Memory Modules.....	25
Installing the CPU	28
Installing a SATA Hard Drive	32
Installing a NGFF (M.2) SSD.....	35
Installing a NGFF Wireless LAN Module	38
Installing a Mini-PCIe WLAN Module.....	41

Chapter 4: BIOS Setup

About BIOS Setup.....	44
When to Configure the BIOS.....	44
Default Configuration	45
Entering Setup	45
Legends.....	45
BIOS Setup Utility.....	47
Main	47
Advanced.....	48
Security	58
Boot.....	58

PREFACE

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written consent from NEXCOM International Co., Ltd.

Disclaimer

The information in this document is subject to change without prior notice and does not represent commitment from NEXCOM International Co., Ltd. However, users may update their knowledge of any product in use by constantly checking its manual posted on our website: <http://www.nexcom.com>. NEXCOM shall not be liable for direct, indirect, special, incidental, or consequential damages arising out of the use of any product, nor for any infringements upon the rights of third parties, which may result from such use. Any implied warranties of merchantability or fitness for any particular purpose is also disclaimed.

Acknowledgements

NDiS B535 is a trademark of NEXCOM International Co., Ltd. All other product names mentioned herein are registered trademarks of their respective owners.

Regulatory Compliance Statements

This section provides the FCC compliance statement for Class A devices and describes how to keep the system CE compliant.

Declaration of Conformity

FCC

This equipment has been tested and verified to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area (domestic environment) is likely to cause harmful interference, in which case the user will be required to correct the interference (take adequate measures) at their own expense.

CE

The product(s) described in this manual complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

RoHS Compliance



NEXCOM RoHS Environmental Policy and Status Update

NEXCOM is a global citizen for building the digital infrastructure. We are committed to providing green products and services, which are compliant with European Union RoHS (Restriction on Use of Hazardous Substance in Electronic Equipment) directive 2011/65/EU, to be your trusted green partner and to protect our environment.

RoHS restricts the use of Lead (Pb) < 0.1% or 1,000ppm, Mercury (Hg) < 0.1% or 1,000ppm, Cadmium (Cd) < 0.01% or 100ppm, Hexavalent Chromium (Cr6+) < 0.1% or 1,000ppm, Polybrominated biphenyls (PBB) < 0.1% or 1,000ppm, and Polybrominated diphenyl Ethers (PBDE) < 0.1% or 1,000ppm.

In order to meet the RoHS compliant directives, NEXCOM has established an engineering and manufacturing task force to implement the introduction of green products. The task force will ensure that we follow the standard NEXCOM development procedure and that all the new RoHS components and new manufacturing processes maintain the highest industry quality levels for which NEXCOM are renowned.

The model selection criteria will be based on market demand. Vendors and suppliers will ensure that all designed components will be RoHS compliant.

How to recognize NEXCOM RoHS Products?

For existing products where there are non-RoHS and RoHS versions, the suffix "(LF)" will be added to the compliant product name.

All new product models launched after January 2013 will be RoHS compliant. They will use the usual NEXCOM naming convention.

Warranty and RMA

NEXCOM Warranty Period

NEXCOM manufactures products that are new or equivalent to new in accordance with industry standard. NEXCOM warrants that products will be free from defect in material and workmanship for 2 years, beginning on the date of invoice by NEXCOM. HCP series products (Blade Server) which are manufactured by NEXCOM are covered by a three year warranty period.

NEXCOM Return Merchandise Authorization (RMA)

- Customers shall enclose the “NEXCOM RMA Service Form” with the returned packages.
- Customers must collect all the information about the problems encountered and note anything abnormal or, print out any on-screen messages, and describe the problems on the “NEXCOM RMA Service Form” for the RMA number apply process.
- Customers can send back the faulty products with or without accessories (manuals, cable, etc.) and any components from the card, such as CPU and RAM. If the components were suspected as part of the problems, please note clearly which components are included. Otherwise, NEXCOM is not responsible for the devices/parts.
- Customers are responsible for the safe packaging of defective products, making sure it is durable enough to be resistant against further damage and deterioration during transportation. In case of damages occurred during transportation, the repair is treated as “Out of Warranty.”
- Any products returned by NEXCOM to other locations besides the customers’ site will bear an extra charge and will be billed to the customer.

Repair Service Charges for Out-of-Warranty Products

NEXCOM will charge for out-of-warranty products in two categories, one is basic diagnostic fee and another is component (product) fee.

Repair Service Charges for Out-of-Warranty Products

NEXCOM will charge for out-of-warranty products in two categories, one is basic diagnostic fee and another is component (product) fee.

System Level

- Component fee: NEXCOM will only charge for main components such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistor, capacitor.
- Items will be replaced with NEXCOM products if the original one cannot be repaired. Ex: motherboard, power supply, etc.
- Replace with 3rd party products if needed.
- If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.

Board Level

- Component fee: NEXCOM will only charge for main components, such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistors, capacitors.
- If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.

Warnings

Read and adhere to all warnings, cautions, and notices in this guide and the documentation supplied with the chassis, power supply, and accessory modules. If the instructions for the chassis and power supply are inconsistent with these instructions or the instructions for accessory modules, contact the supplier to find out how you can ensure that your computer meets safety and regulatory requirements.

Cautions

Electrostatic discharge (ESD) can damage system components. Do the described procedures only at an ESD workstation. If no such station is available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the computer chassis.

Safety Information

Before installing and using the device, note the following precautions:

- Read all instructions carefully.
- Do not place the unit on an unstable surface, cart, or stand.
- Follow all warnings and cautions in this manual.
- When replacing parts, ensure that your service technician uses parts specified by the manufacturer.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- The load of the system unit does not solely rely for support from the rackmounts located on the sides. Firm support from the bottom is highly necessary in order to provide balance stability.
- The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

Installation Recommendations

Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.

Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:

- A Philips screwdriver
- A flat-tipped screwdriver
- A grounding strap
- An anti-static pad

Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nose pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.

Safety Precautions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a stable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection to protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Place the power cord in a way so that people will not step on it. Do not place anything on top of the power cord. Use a power cord that has been approved for use with the product and that it matches the voltage and current marked on the product's electrical range label. The voltage and current rating of the cord must be greater than the voltage and current rating marked on the product.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of breakage.
15. Do not place heavy objects on the equipment.
16. The unit uses a three-wire ground cable which is equipped with a third pin to ground the unit and prevent electric shock. Do not defeat the purpose of this pin. If your outlet does not support this kind of plug, contact your electrician to replace your obsolete outlet.
17. **CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.**

Technical Support and Assistance

1. For the most updated information of NEXCOM products, visit NEXCOM's website at www.nexcom.com.
2. For technical issues that require contacting our technical support team or sales representative, please have the following information ready before calling:
 - Product name and serial number
 - Detailed information of the peripheral devices
 - Detailed information of the installed software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wordings of the error messages

Warning!

1. Handling the unit: carry the unit with both hands and handle it with care.
2. Maintenance: to keep the unit clean, use only approved cleaning products or clean with a dry cloth.

Conventions Used in this Manual



Warning:

Information about certain situations, which if not observed, can cause personal injury. This will prevent injury to yourself when performing a task.



Caution:

Information to avoid damaging components or losing data.



Note:

Provides additional information to complete a task easily.

Global Service Contact Information

Headquarters

NEXCOM International Co., Ltd.

9F, No. 920, Chung-Cheng Rd.,
ZhongHe District, New Taipei City, 23586,
Taiwan, R.O.C.

Tel: +886-2-8226-7786

Fax: +886-2-8226-7782

www.nexcom.com

Asia

Taiwan

NEXCOM Intelligent Systems

Taipei Office

13F, No.920, Chung-Cheng Rd.,
ZhongHe District,
New Taipei City, 23586, Taiwan, R.O.C.

Tel: +886-2-8226-7796

Fax: +886-2-8226-7792

Email: sales@nexcom.com.tw

www.nexcom.com.tw

NEXCOM Intelligent Systems

Taichung Office

16F, No.250, Sec. 2, Chongde Rd.,
Beitun Dist.,

Taichung City 406, R.O.C.

Tel: +886-4-2249-1179

Fax: +886-4-2249-1172

Email: sales@nexcom.com.tw

www.nexcom.com.tw

Japan

NEXCOM Japan

9F, Tamachi Hara Bldg.,
4-11-5, Shiba Minato-ku,
Tokyo, 108-0014, Japan

Tel: +81-3-5419-7830

Fax: +81-3-5419-7832

Email: sales@nexcom-jp.com

www.nexcom-jp.com

China

NEXCOM China

Floor 5, No.4, No.7 fengxian middle Rd.,
(Beike Industrial Park), Haidian District,
Beijing, 100094, China

Tel: +86-10-5704-2680

Fax: +86-10-5704-2681

Email: sales@nexcom.cn

www.nexcom.cn

NEXCOM Shanghai

Room 603/604, Huiyinmingzun Plaza Bldg., 1,
No.609, Yunlin East Rd.,
Shanghai, 200333, China
Tel: +86-21-5278-5868
Fax: +86-21-3251-6358
Email: sales@nexcom.cn
www.nexcom.cn

NEXCOM Surveillance Technology Corp.

Room202, Building B,
the GuangMing Industrial Zone Zhonghua Rd.,
Minzhi Street, Longhua District,
Shenzhen 518131, China
Tel: +86-755-8364-7768
Fax: +86-755-8364-7738
Email: steveyang@nexcom.com.tw
www.nexcom.cn

NEXCOM United System Service

Hui Yin Ming Zun Building Room 1108,
Building No. 11, 599 Yunling Road, Putuo District,
Shanghai, 200062, China
Tel: +86-21-6125-8282
Fax: +86-21-6125-8281
Email: frankyang@nexcom.cn
www.nexcom.cn

Europe

United Kingdom NEXCOM EUROPE

10 Vincent Avenue,
Crownhill Business Centre,
Milton Keynes, Buckinghamshire
MK8 0AB, United Kingdom
Tel: +44-1908-267121
Fax: +44-1908-262042
Email: sales.uk@nexcom.eu
www.nexcom.eu

Italy

NEXCOM ITALIA S.r.l

Via Lanino 42,
21047 Saronno (VA), Italia
Tel: +39 02 9628 0333
Fax: +39 02 9625 570
Email: nexcomitalia@nexcom.eu
www.nexcomitalia.it

Package Contents

Before continuing, verify that the NDiS B535 package that you received is complete. Your package should have all the items listed in the following table.

Item	Part Number	Name	Description	Qty
1	50311C0006X00	(H)I Head Screw Long Fei: I2 x 3 ISO-NI	I2 x 3 ISO-NI	2
2	50311F0037X00	(H)I Head Screw Long Fei: I3 x 4 iso(B)	I3 x 4 Black	2
3	50311F0100X00	(H)Round Head Screw w/Spring+Flat Washer Long Fei: P3 x 6L	P3 x 6 iso/SW6 x 0.5 NI	4
4	50311F0110X00	(H)Flat Head Screw Long Fei: F3 x 5ISO + Nylok NIGP	F3 x 5 NI Nylok	4
5	50344C0034X00	(H)Copper Post Long Fei: 6.5 x 5 x M3	With Male/Female (Female) 6.5mm x (Male) 5mm x M3	1
6	5040420101X00	NDIS B535 HDD Bracket VER: A JAN YU	8 x 10.4 x 95mm SPCC NI	2
7	5044440031X00	Rubber Foot Kang Yang: RF20-5-4P	19.8 x 18 x 5.0mm	4
8	5060200082X00	Thermal Pad NDiS B533 VER: A EAPUS	25 x 25 x 0.2mm	2
9	7400096005X00	Power Adapter FSP: FSP096-AHBN2	96W DC 12V/8A DC Plug 4 PIN Power Molding Type	1

Ordering Information

The following information below provides ordering information for NDiS B535.

NDiS B535 (P/N: 10W00B53500X0)

6th generation Intel® Core™ processor (up to 35W) fanless system,
Intel® 100 Series chipset

NDiS-WALL Mount Kit for NDiS B532/B533/B535 (P/N: 10W00NDIS00X0)

CHAPTER 1: PRODUCT INTRODUCTION

Overview




NDiS B535 is a powerful digital signage player which is built around the superb technology of 6th generation Intel® Core™ processor family series and Intel® 100 Series chipset integrated graphics controller. The digital signage player can offer impressive system performance and full HD videos. With support for 4K2K video playback on three independent displays, the 4K2K signage player can fully satisfy customer's expectation and therefore be used in applications such as advertising, hospitality, brand promotion and digital menu board.

Key Features


- 6th Generation Intel® Core™ processor
- Integrated Intel® HD Graphics 530
- Support 3 independent 4K2K 60Hz video out
- USB 3.0 x6, RS-232 x4, Dual GbE LAN support
- NFGG type storage and WLAN support
- DirectX® 12 support
- Fanless design

Physical Features

Front Panel

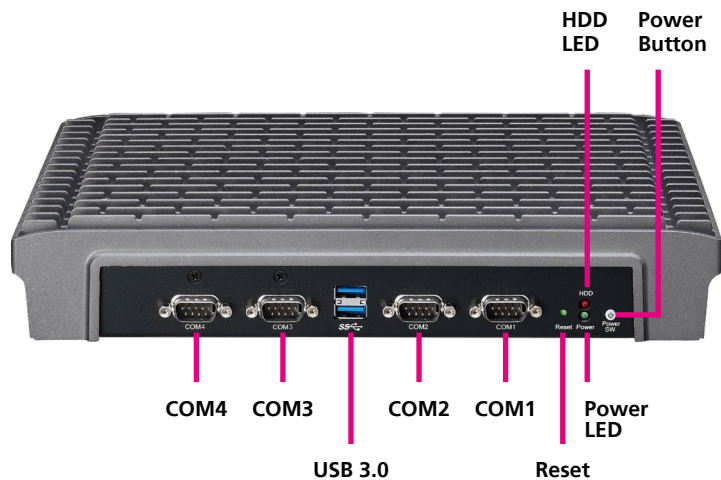

Rear Panel

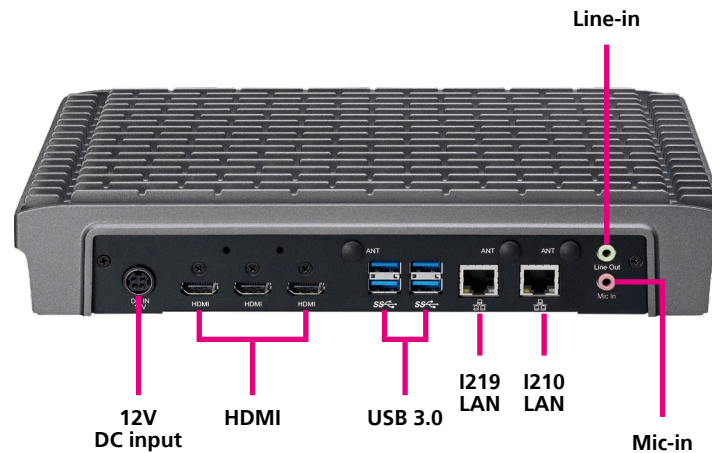

Hardware Specifications

CPU Support

- 6th generation Intel® Core™ LGA socket type processor

Chipset

- Intel® 100 Series chipset
- Integrated Intel® HD Graphics 530

Main Memory

- 2x 260-pin SO-DIMM Sockets, Supports DDR4 1866/2133 MHz non-ECC, un-buffered memory up to 32G (Single socket max. 16GB)

I/O Interface-Front

- 1x Power status LED
- 1x HDD status LED
- 1x Power switch
- 1x Reset switch
- 2x USB 3.0
- 4x DB9 for RS-232

I/O Interface-Rear

- +12V DC-in
- 3x HDMI 2.0
- 4x USB 3.0
- 2x RJ45 with LED for 10/100/1000Mbps Ethernet
I219 LAN supports IAMT and PXE
I210 LAN supports PXE
- 1x Min-in/1x Line-out
- 3x Antenna holes for Wi-Fi and TV tuner

Storage

- 1x SATA 2.5" HDD/SSD
- 1x NGFF (M.2) SSD card slot (supports 22x42, 22x80)

Expansion

- 1x mini-PCIe for optional WLAN/TV tuner module
- 1x NGFF (M.2) E key for optional WLAN
- 1x SIM Slot

Construction

- Top cover made by aluminum for main heat exchange
- Chassis made by steel in black

Dimensions

- 294mm (W) x 198mm (D) x 52mm (H) (11.6" x 7.8" x 2.0")

Power Supply

- 1x External 96W AC/DC adapter
Input: 100~240VAC
Output: +12VDC

Environment

- Operating temperature: 0°C to 40°C
- Storage temperature: -20°C to 80°C
- Humidity: 10 to 90% (non-condensing)

Certification

- CE/FCC Class A

Operating System

- Windows 7 (32/64-bit)/ Windows 8.1 (64-bit)/ Windows 10 (64-bit)

CHAPTER 2: JUMPERS AND CONNECTORS

This chapter describes how to set the jumpers and connectors on the NDiS B535 motherboard.

Before You Begin

- Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.
- Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:
 - A Philips screwdriver
 - A flat-tipped screwdriver
 - A set of jewelers screwdrivers
 - A grounding strap
 - An anti-static pad
- Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nosed pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.
- Before working on internal components, make sure that the power is off. Ground yourself before touching any internal components, by touching a metal object. Static electricity can damage many of the electronic components. Humid environments tend to have less static electricity than

dry environments. A grounding strap is warranted whenever danger of static electricity exists.

Precautions

Computer components and electronic circuit boards can be damaged by discharges of static electricity. Working on computers that are still connected to a power supply can be extremely dangerous.

Follow the guidelines below to avoid damage to your computer or yourself:


- Always disconnect the unit from the power outlet whenever you are working inside the case.
- If possible, wear a grounded wrist strap when you are working inside the computer case. Alternatively, discharge any static electricity by touching the bare metal chassis of the unit case, or the bare metal body of any other grounded appliance.
- Hold electronic circuit boards by the edges only. Do not touch the components on the board unless it is necessary to do so. Don't flex or stress the circuit board.
- Leave all components inside the static-proof packaging that they shipped with until they are ready for installation.
- Use correct screws and do not over tighten screws.

Locations of the Jumpers and Connectors for NDiB B535


NDiB B535

The figure below is the top view of the NDiB B535, which is the mainboard used in the NDiS B535. It shows the locations of the jumpers and connectors.

Top View

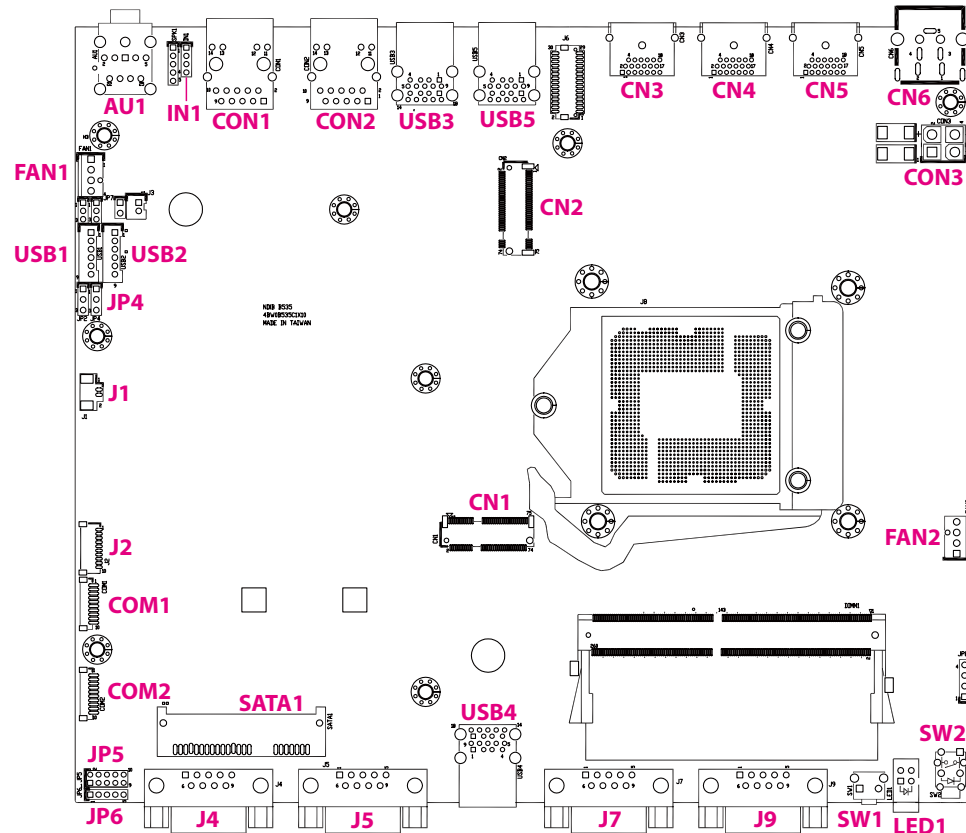

Bottom View

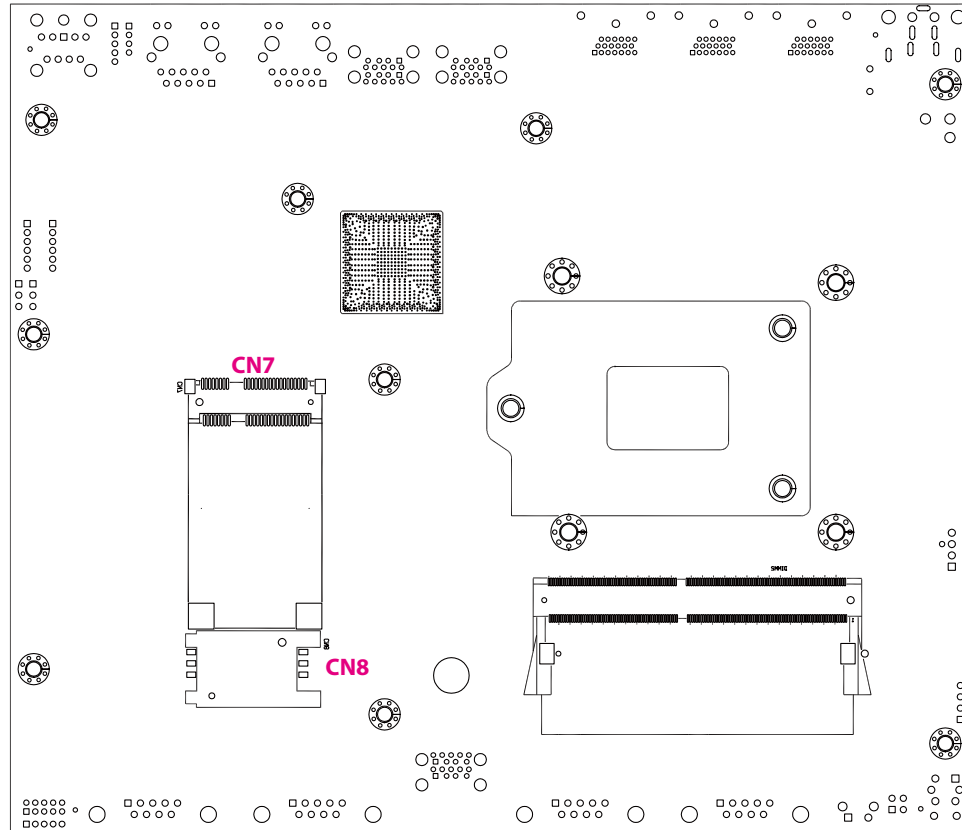


Jumper Settings


A jumper is the simplest kind of electric switch. It consists of two metal pins and a cap. When setting the jumpers, ensure that the jumper caps are placed on the correct pins. When the jumper cap is placed on both pins, the jumper is short. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is open.

Refer to the illustrations below for examples of what the 2-pin and 3-pin jumpers look like when they are short (on) and open (off).

Two-Pin Jumpers: Open (Left) and Short (Right)

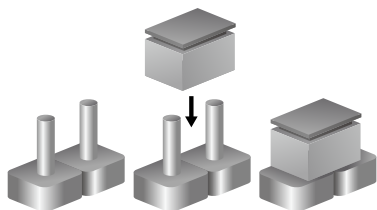


Three-Pin Jumpers: Pins 1 and 2 are Short

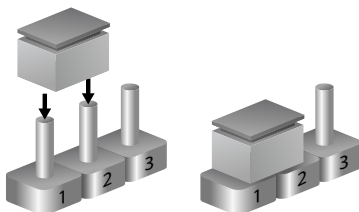

Jumpers

RTC Clear Jumper

Connector type: 1x3 3-pin header, 2.54mm pitch
Connector location: JP4

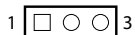


Pin	Settings
1-3 On	Normal
2-3 On	Clear CMOS

1-2 On: default

COM4 RI Voltage Select

Connector type: 1x5 5-pin header, 2.0mm pitch
Connector location: JP6

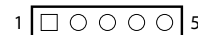

Pin	Definition	Pin	Definition
1	VCC5	2	COM_RI#4_T
3	VCC12	4	COM_RI#4_T
5	COM_RI#4	6	

Connector Pin Definitions

External I/O Interfaces - Front Panel

Power Button

Connector location: SW2



Power	LED Definition
ON	Blue
OFF	Red

LED Connector

Connector location: LED1

HDD



Power

LEDs	LED Definition
HDD	Red
Power	Green

Reset Button

Connector location: SW1




Pin	Definition
1-2	System Reset

COM1 to COM4 Connectors

Connector type: DB-9 port

Connector location: J9 (COM1), J7 (COM2), J5 (COM3) and J4 (COM4)

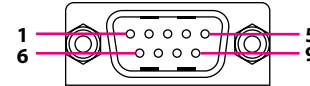


Pin	Definition	Pin	Definition
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI		

USB 3.0 Ports

Connector type: Dual USB 3.0 ports

Connector location: USB4

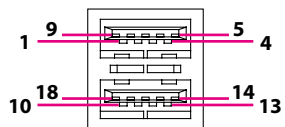


Pin	Definition	Pin	Definition
1	VCC	2	USB0_N
3	USB0_P	4	GND
5	USB3_RX0_N	6	USB3_RX0_P
7	GND	8	USB3_TX0_N
9	USB3_TX0_P	10	VCC
11	USB1_N	12	USB1_P
13	GND	14	USB3_RX1_N
15	USB3_RX1_P	16	GND
17	USB3_TX1_N	18	USB3_TX1_P

External I/O Interfaces - Rear Panel

DC Jack Connector

Connector location: CN6

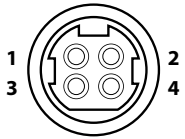


Pin	Definition	Pin	Definition
1	12V DC_IN	2	12V DC_IN
3	GND	4	GND
5	GND		

HDMI Connectors

Connector type: HDMI port

Connector location: CN5, CN4 and CN3

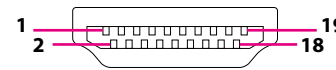


Pin	Definition	Pin	Definition
1	HDMI_D2+	2	GND
3	HDMI_D2-	4	HDMI_D1+
5	GND	6	HDMI_D1-
7	HDMI_D0+	8	GND
9	HDMI_D0-	10	HDMI_CLK+
11	GND	12	HDMI_CLK-
13	NC	14	NC
15	HDMI_DDC_SCL	16	HDMI_DDC_SDA
17	GND	18	VCC5
19	HDMI_HPD		

USB 3.0 Ports

Connector type: Dual USB 3.0 ports

Connector location: USB5 and USB3

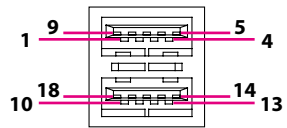


Pin	Definition	Pin	Definition
1	VCC	2	USB0_N
3	USB0_P	4	GND
5	USB3_RX0_N	6	USB3_RX0_P
7	GND	8	USB3_TX0_N
9	USB3_TX0_P	10	VCC
11	USB1_N	12	USB1_P
13	GND	14	USB3_RX1_N
15	USB3_RX1_P	16	GND
17	USB3_TX1_N	18	USB3_TX1_P

LAN Connectors

Connector type: RJ45 port with LEDs

Connector location: CON2 and CON1

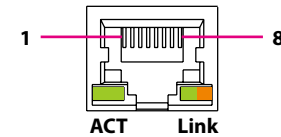


Pin	Definition	Pin	Definition
1	TCT	2	TD4-
3	TD4+	4	TD3-
5	TD3+	6	TD2-
7	TD2+	8	TD1-
9	TD1+	10	TCTG
11	Left_LED+	12	Left_LED-
13	Right_LED+	14	Right_LED-

Audio Connectors

Connector type: 2x 3.5mm jack

Connector location: AU1

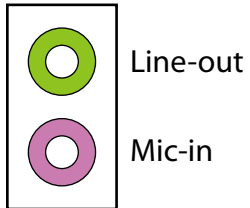


Pin	Definition	Pin	Definition
1	GND	2	FRONT-L
3	GND	4	FRONT-JD
5	FRONT-R	N/A	N/A
22	LINE-L	23	GND
24	LINE-JD	25	LINE-R

Internal Connectors

USB Connectors

Connector type: 1x6 6-pin header JST, 2.0mm pitch


Connector location: USB1 and USB2

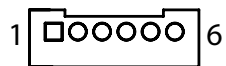

Pin	Definition	Pin	Definition
1	VCC	2	USB0_N
3	USB0_P	4	USB1_N
5	USB1_P	6	GND

SIM Card Slot

Connector location: CN8

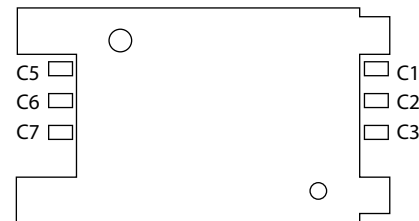


Pin	Definition	Pin	Definition
C1	UIM_PWR	C5	GND
C2	UIM_RST	C6	NC
C3	UIM_CLK	C7	UIM_DAT

Debug 80 Port Connector

Connector type: 1x10 10-pin header, 1.0mm pitch

Connector location: J2

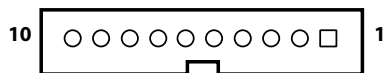


Pin	Definition	Pin	Definition
1	GND	2	PCIRST#
3	33M_CLK	4	LPC_FRAME#
5	LPC_AD3	6	LPC_AD2
7	LPC_AD1	8	LPC_ADO
9	3.3V	10	3.3V

SATA Connector (7-pin and 15-pin)

Connector type: Standard Serial ATA 7P and 15P

Connector location: SATA1

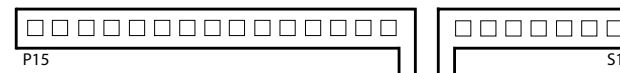


Pin	Definition	Pin	Definition
S1	GND	S2	SATA_TXP
S3	SATA_TXN	S4	GND
S5	SATA_RXN	S6	SATA_RXP
S7	GND		
P2	NC	P3	NC
P4	GND	P5	GND
P6	GND	P7	VCC5
P8	VCC5	P9	VCC5
P10	GND	P11	NC
P12	GND	P13	VCC12
P14	VCC12	P15	VCC12

Battery Connector

Connector type: 1x2 2-pin header JST, 1.25mm pitch

Connector location: J1

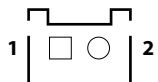


Pin	Definition
1	GND
2	3V

GPIO

Connector type: 2x5 10-pin header

Connector location: JP5

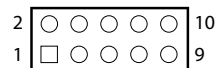


Pin	Definition	Pin	Definition
1	GPI1	2	GPO1
3	GPI2	4	GPO2
5	GPI3	6	GPO3
7	GPI4	8	GPO4
9	GND	10	VCC5

FAN Connectors

Connector type: 1x4 4-pin header, 2.54mm pitch

Connector location: FAN1 and FAN2

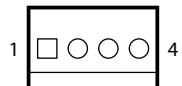


Pin	Definition	Pin	Definition
1	GND	2	VCC
3	SPEED	4	CONTROL

COM3 & COM4 Connectors (Co-layout with J5 & J4)

Connector type: 1x10 10-pin header

Connector location: COM1 (COM3) and COM2 (COM4)

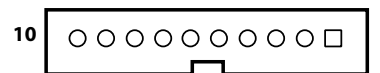


Pin	Definition	Pin	Definition
1	COM_DCD#3	2	COM_RXD3
3	COM_TXD3	4	COM_DTR#3
5	GND	6	COM_DSR#3
7	COM_RTS#3	8	COM_CTS#3
9	COM_RI#3_T	10	GND
MH1	GND	MH2	GND

Line-in

Connector type: 1x4 4-pin header, 2.0mm pitch

Connector location: IN1

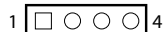


Pin	Definition	Pin	Definition
1	LINE1-L1	2	AGND
3	LINEIN_JD	4	LINE1-R1

DC-in Power Connector (Co-layout with CN6)

Connector type: 2x2 4-pin header


Connector location: CON3

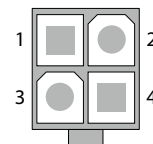

Pin	Definition	Pin	Definition
1	GND	2	GND
3	12V DC_IN	4	12V DC_IN

M.2 2230 E-Key

Connector location: CN1

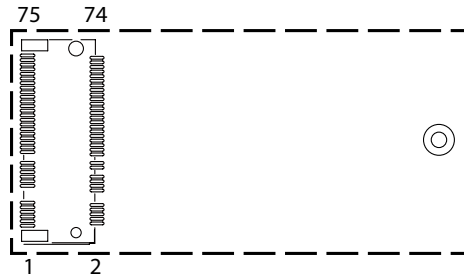


Pin	Definition	Pin	Definition
1	GND	2	3VSB
3	USPB	4	3VSB
5	USBN	6	NC
7	GND	8	NC
9	NC	10	NC
11	NC	12	NC
13	NC	14	NC
15	NC	16	NC
17	NC	18	NC
19	NC	20	NC
21	NC	22	UART_RXD
23	NC		
		32	UART_TXD
33	GND	34	UART_CTS
35	PCIE_TXP	36	UART_RTS
37	PCIE_TXN	38	NC

Pin	Definition	Pin	Definition
39	GND	40	NC
41	PCIE_RXP	42	NC
43	PCIE_RXN	44	NC
45	GND	46	NC
47	CLK_PCIEP	48	NC
49	CLK_PCIEN	50	SUSCLK
51	GND	52	PLTRST#
53	CLKREQ#	54	NC
55	WAKE#	56	NC
57	GND	58	NC
59	NC	60	NC
61	NC	62	NC
63	GND	64	NC
65	NC	66	NC
67	NC	68	NC
69	GND	70	NC
71	NC	72	3VSB
73	NC	74	3VSB
75	GND		

M.2 2242/2280 M-Key

Connector location: CN2

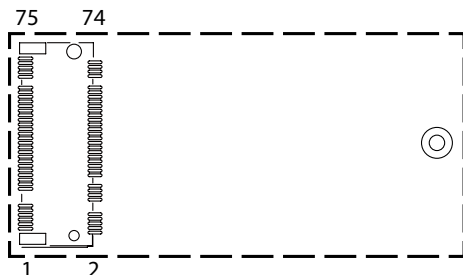


Pin	Definition	Pin	Definition
1	GND	2	+3VSB
3	GND	4	+3VSB
5	PCIE3_RXN	6	NC
7	PCIE3_RXP	8	NC
9	GND	10	NC
11	PCIE3_TXN	12	+3VSB
13	PCIE3_TXP	14	+3VSB
15	GND	16	+3VSB
17	PCIE2_RXN	18	+3VSB
19	PCIE2_RXP	20	NC
21	GND	22	NC
23	PCIE2_TXN	24	NC
25	PCIE2_TXP	26	NC
27	GND	28	NC
29	PCIE1_RXN	30	NC
31	PCIE1_RXP	32	NC

Pin	Definition	Pin	Definition
33	GND	34	NC
35	PCIE1_TXN	36	NC
37	PCIE1_TXP	38	NC
39	GND	40	NC
41	SATA_RXP(PCIE0_RXP)	42	NC
43	SATA_RXN(PCIE0_RXN)	44	NC
45	GND	46	NC
47	SATA_TXN(PCIE0_TXN)	48	NC
49	SATA_TXP(PCIE0_TXP)	50	RESET#
51	GND	52	CLKREQ#
53	CLK_PCIEN	54	NC
55	CLK_PCIEP	56	NC
57	GND	58	NC
67	NC	68	NC
69	M2M_PEDET	70	+3VSB
71	GND	72	+3VSB
73	GND	74	+3VSB
75	GND		

Mini-PCIe Connector (Bottom)

Connector location: CN7

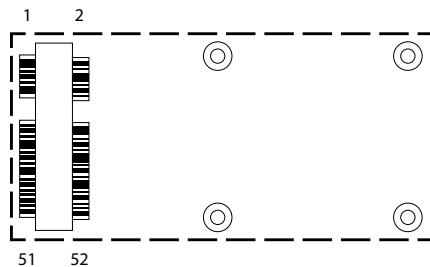

Pin	Definition	Pin	Definition
1	WAKE#	2	3.3VSB
3	NC	4	GND
5	NC	6	1.5V
7	CLK_REQ#	8	NC
9	GND	10	NC
11	PCIE_CLK#	12	NC
13	PCIE_CLK	14	NC
15	GND	16	NC
17	NC	18	GND
19	NC	20	WLAN_DIS#
21	GND	22	RESET#
23	PCIE_RX_N	24	3.3VSB
25	PCIE_RX_P	26	GND

Pin	Definition	Pin	Definition
27	GND	28	1.5V
29	GND	30	SMBCLK
31	PCIE_TX_N	32	SMBDAT
33	PCIE_TX_P	34	GND
35	GND	36	USB_N
37	GND	38	USB_P
39	3.3VSB	40	GND
41	3.3VSB	42	NC
43	GND	44	NC
45	NC	46	NC
47	NC	48	1.5V
49	NC	50	GND
51	NC	52	3.3VSB

CHAPTER 3: SYSTEM SETUP

Removing the Chassis Cover



Prior to removing the chassis cover, make sure the unit's power is off and disconnected from the power sources to prevent electric shock or system damage.



1. The screws on the front and bottom are used to secure the cover to the chassis. Remove these screws and put them in a safe place for later use.




Installing SO-DIMM Memory Modules

DIMM1

1. Locate the DIMM1 socket on the board.

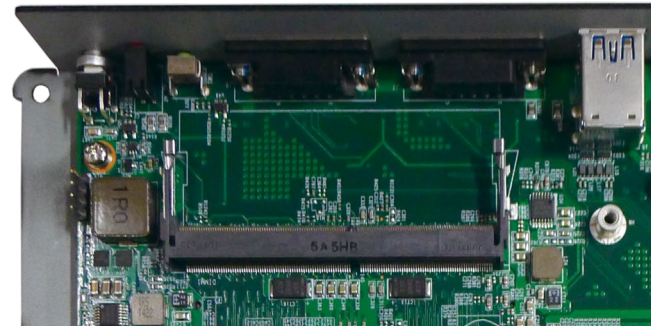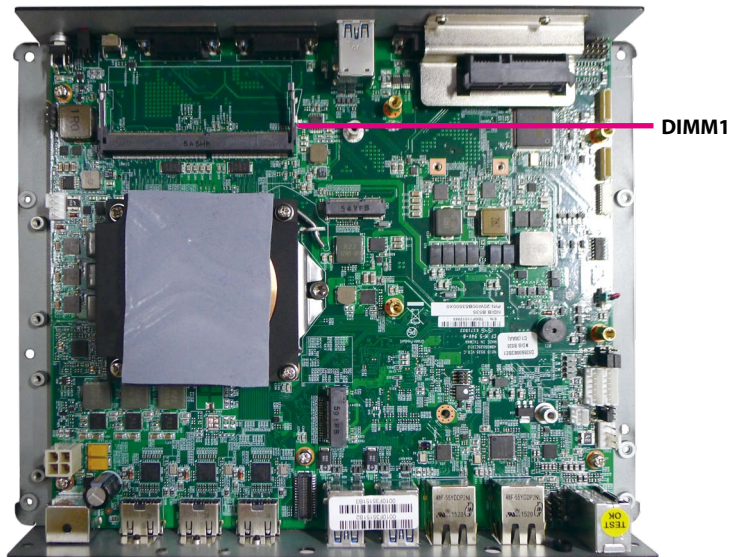


2. Insert the module into the socket at an approximately 30 degree angle. Push the module down until the clips on both sides of the socket lock into position.

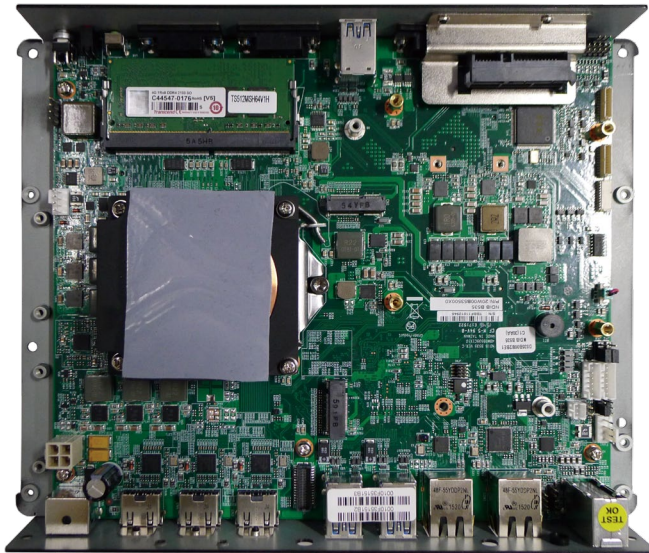


DIMM2

1. Loosen the screw on the SO-DIMM cover on the bottom of the chassis, then lift up the cover and remove it from the chassis it.
2. Insert the module into the socket at an approximately 30 degree angle. Push the module down until the clips on both sides of the socket lock into position.

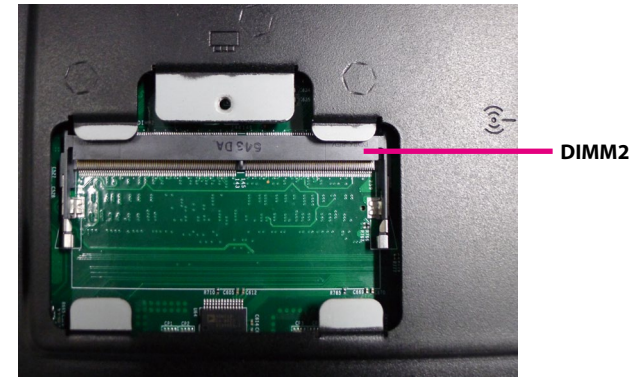


Installing the CPU


1. Locate the heat sink on the board.

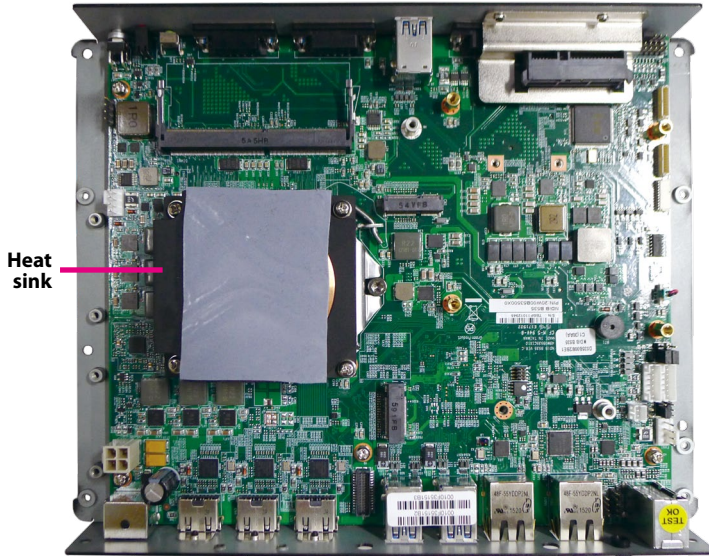


2. Loosen the mounting screws that secure the heat sink to the chassis.

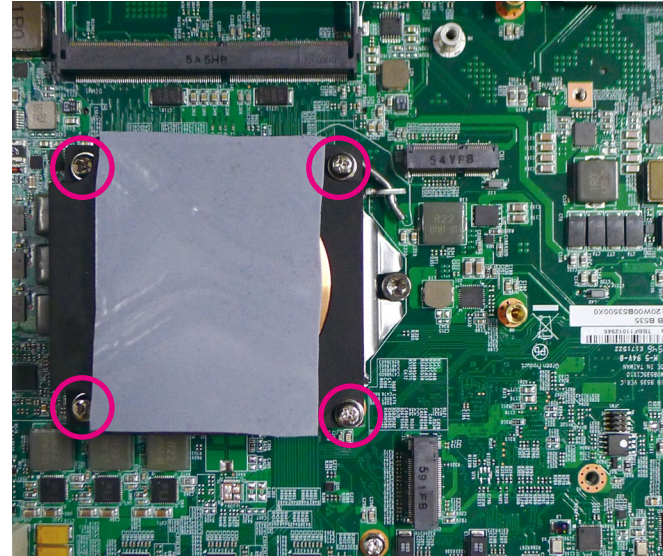


3. The CPU socket is readily accessible after you have removed the heat sink.

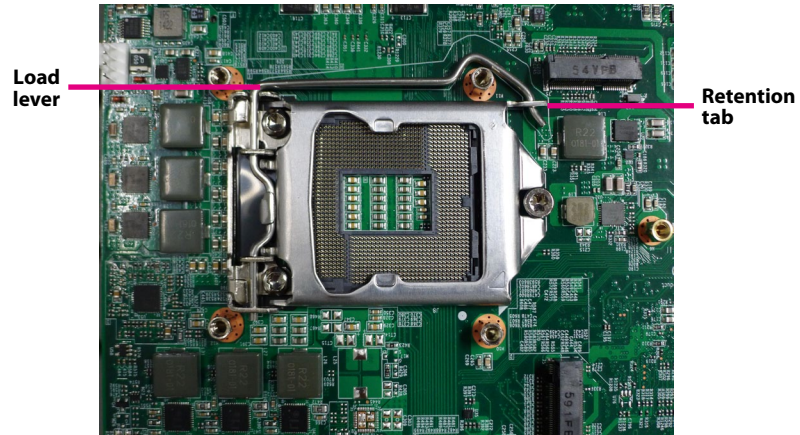


4. Unlock the socket by pushing the load lever down, moving it sideways until it is released from the retention tab; then lift the load lever up.

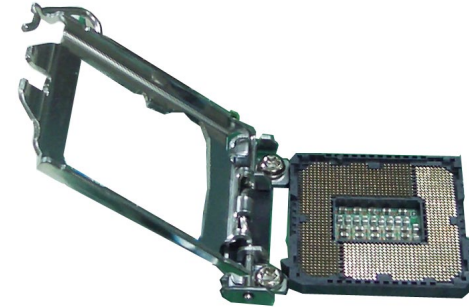

5. Insert the CPU into the socket. The triangular edge on the CPU must align with the corner of the CPU socket shown on the photo.

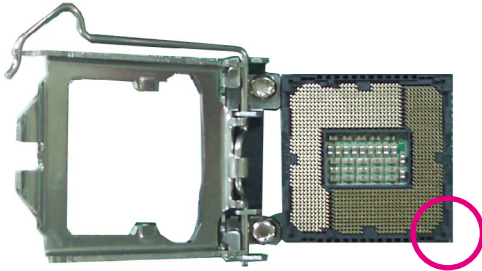

The CPU's notch will at the same time fit into the socket's alignment key.

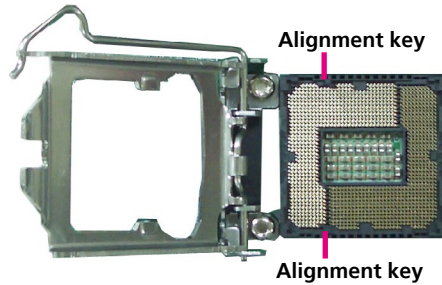

6. Close the load plate and then hook the load lever under the retention tab.




Do not force the CPU into the socket. Forcing the CPU into the socket may bend the pins and damage the CPU.




- Handle the CPU by its edges and avoid touching the pins.
- The CPU will fit in only one orientation and can easily be inserted without exerting any force.

7. Remove the adhesive film on the thermal pad and place it onto the CPU.

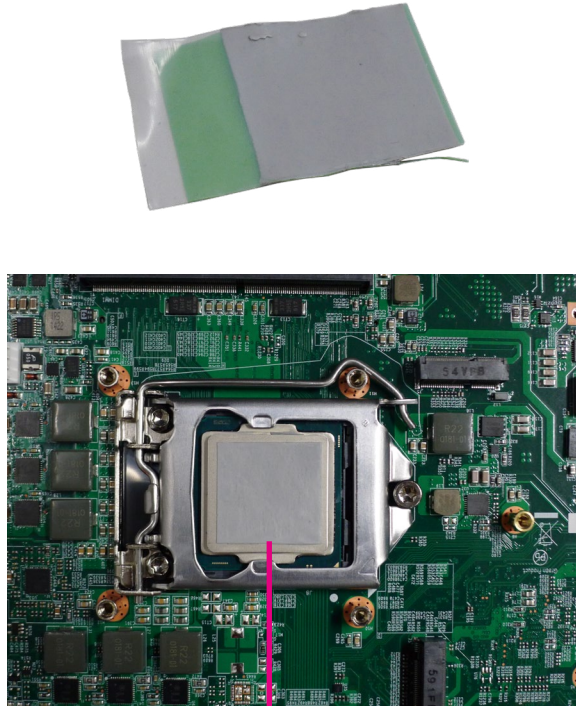

Thermal pad

8. Tighten the screws to secure the heat sink in place.

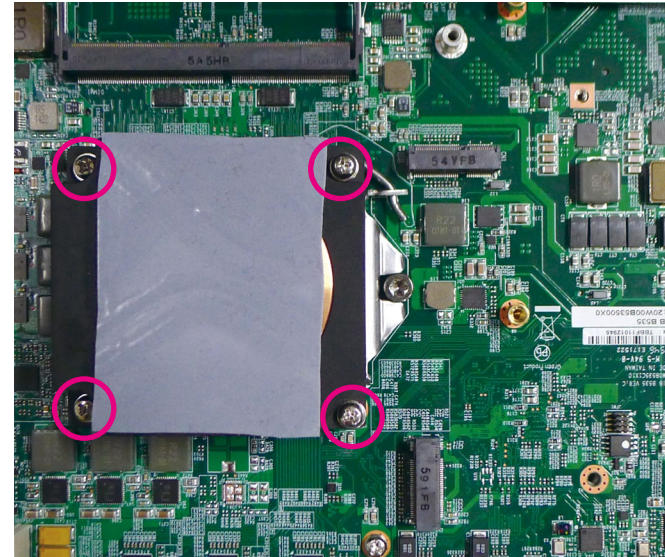


Please install the thermal pad and make sure the adhesive film on the thermal pad is removed before placing it on the heat sink.

Installing a SATA Hard Drive


1. The drive bracket included in the package is used to hold a SATA hard drive.
2. Place the SATA hard drive onto the drive bracket. Align the mounting holes that are on the sides of the SATA drive with the mounting holes on the drive bracket, and secure the SATA drive in place with screws.




3. Locate the SATA connector on the board.

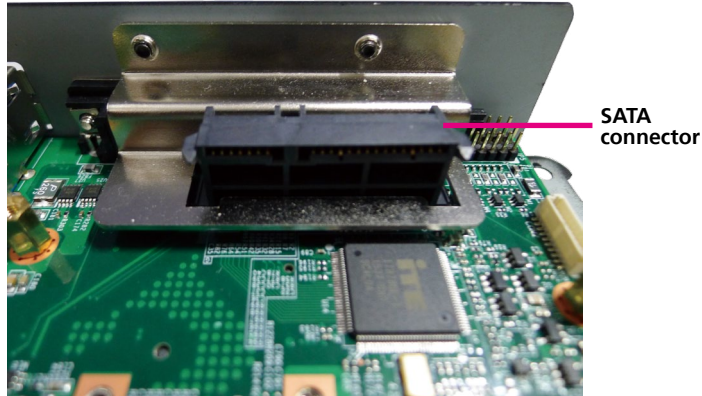

4. Fasten four copper standoffs onto the mounting holes near the SATA connector.


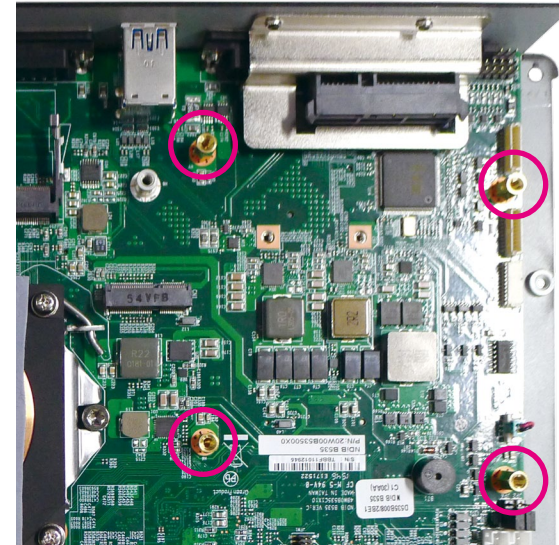


- Align the mounting holes of the drive bracket with the standoffs on the board then use the mounting screws to secure the hard drive in place.

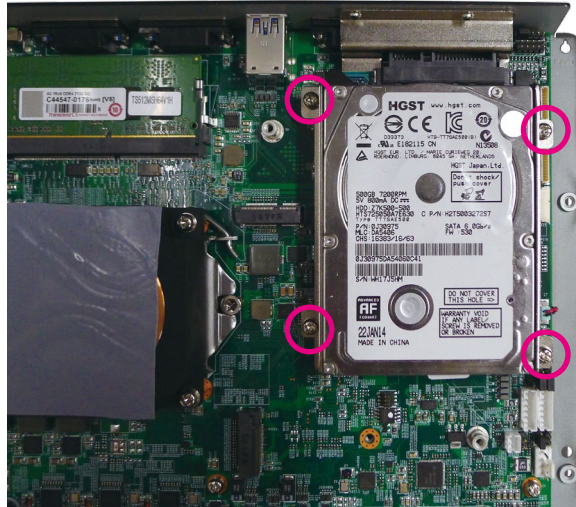

Installing a NGFF (M.2) SSD

The NGFF (M.2) connector supports 22x42 and 22x80 SSD modules.

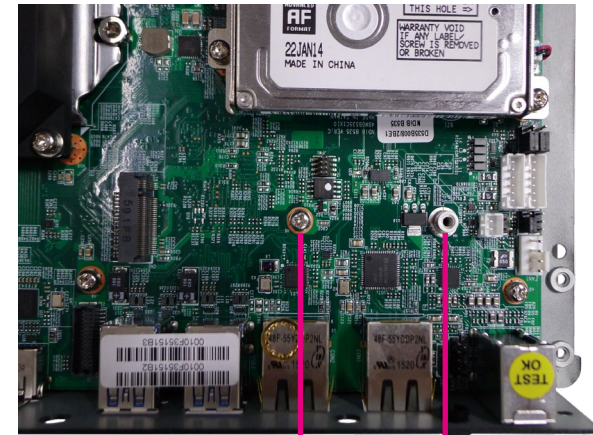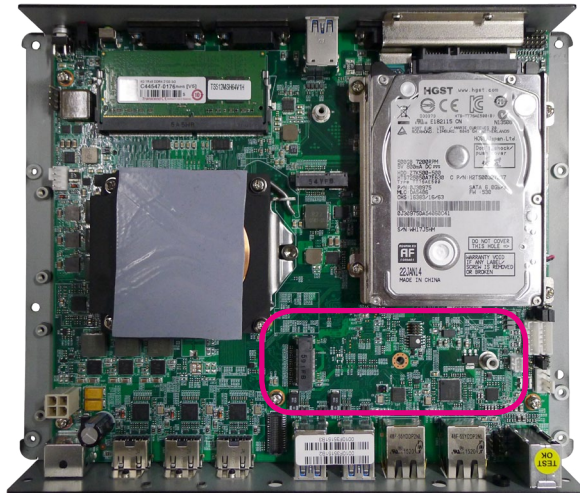


22 x 42
mounting point

22 x 80
mounting point


22 x 80 SSD Installation Instructions

1. Insert the SSD module into the NGFF slot at a 45 degree angle then push the module down and secure it with mounting screw.

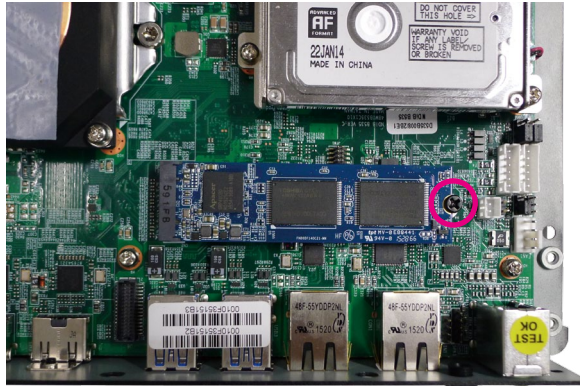


22 x 42 SSD Installation Instructions


1. Remove the screw on the mounting hole for the copper standoff.

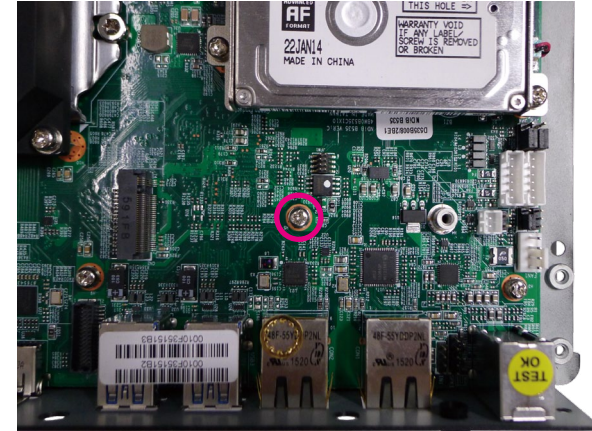

2. Fasten the copper standoff onto the mounting hole.

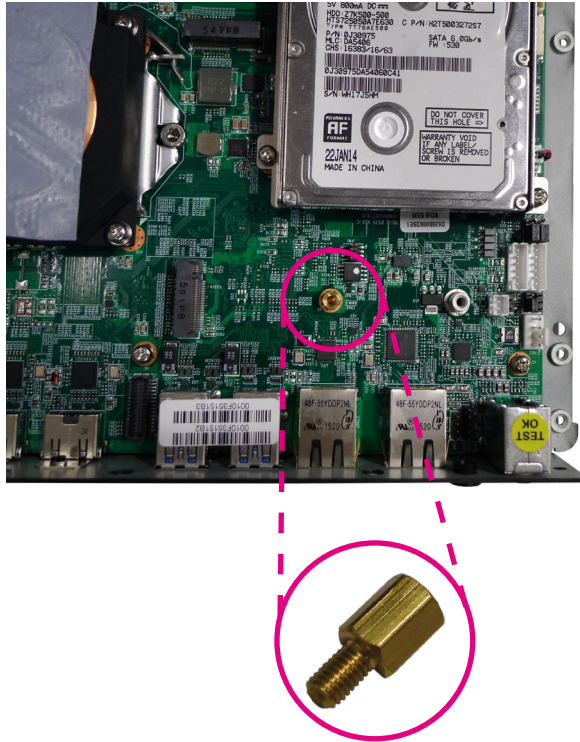



3. Insert the SSD module into the NGFF slot at a 45 degree angle then push the module down and secure it with mounting screw.

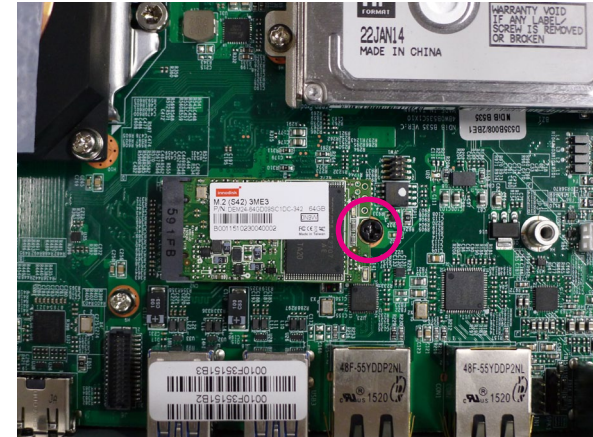

Installing a NGFF Wireless LAN Module

The NGFF (M.2) connector for WLAN supports 16x30 and 22x30 Wi-Fi modules.


1. Insert the Wi-Fi module into the NGFF slot at a 45 degree angle then push the module down and secure it with mounting screw.

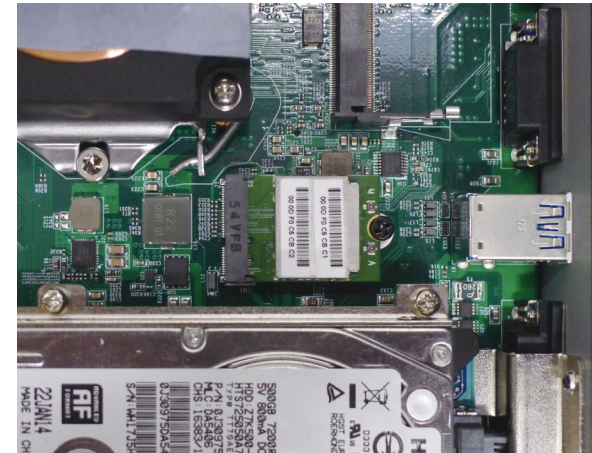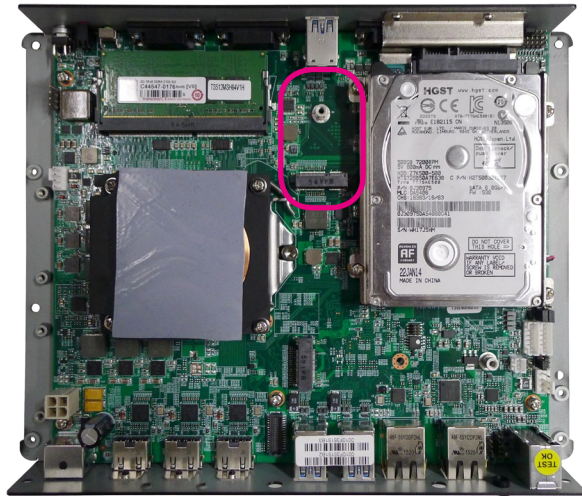

2. Locate the RF connectors on the Wi-Fi module and attach one end of the RF cables onto the Wi-Fi module.



3. Insert ring 1 into the Wi-Fi antenna jacks.

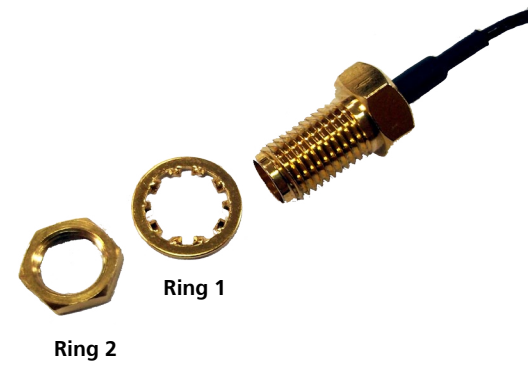

4. Mount the Wi-Fi antenna jacks to the Wi-Fi antenna holes located at the front panel of the chassis, then tighten the antenna jacks with ring 2.




5. Connect the external antennas to the Wi-Fi antenna jacks.



Installing a Mini-PCle WLAN Module

1. On the bottom of the chassis, loosen the screw on the mini-PCle cover, then lift up the cover and remove it from the chassis. The mini-PCle cover is marked by the logo circled below.

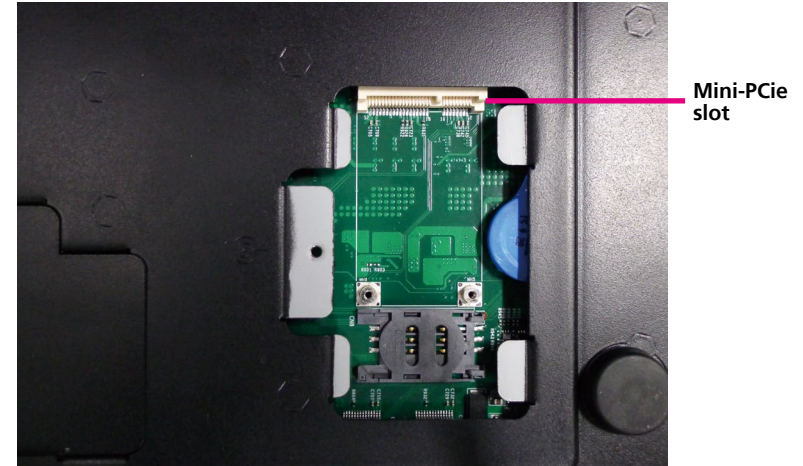


2. Insert the Wi-Fi module into the mini-PCIe slot at a 45 degree angle then push the module down and secure it with mounting screw.


Locate the RF connectors on the Wi-Fi module and attach one end of the RF cables onto the Wi-Fi module.



3. Wire the RF cables to the top of the mainboard.

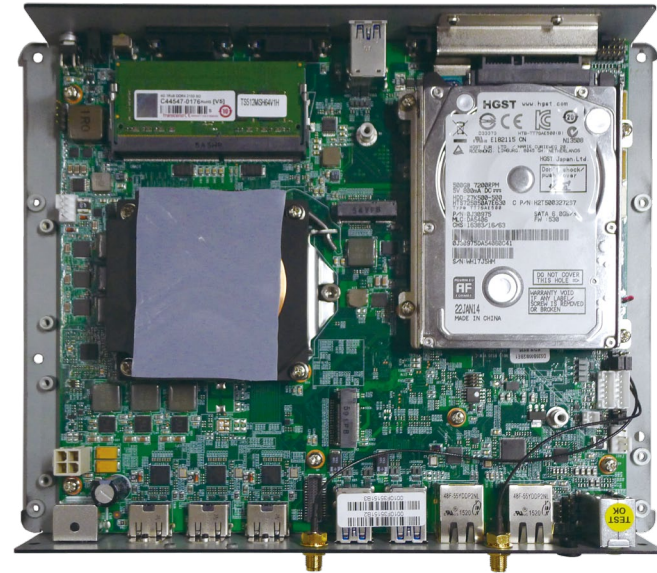

4. Insert ring 1 into the Wi-Fi antenna jacks.

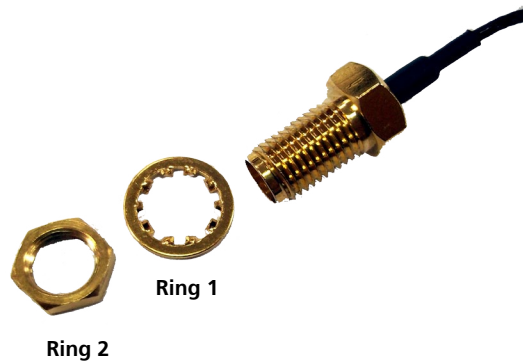

5. Mount the Wi-Fi antenna jacks to the Wi-Fi antenna holes located at the front panel of the chassis, then tighten the antenna jacks with ring 2.



6. Connect the external antennas to the Wi-Fi antenna jacks.



CHAPTER 4: BIOS SETUP

This chapter describes how to use the BIOS setup program for the NDiS B535. The BIOS screens provided in this chapter are for reference only and may change if the BIOS is updated in the future.

To check for the latest updates and revisions, visit the NEXCOM Web site at www.nexcom.com.tw.

About BIOS Setup

The BIOS (Basic Input and Output System) Setup program is a menu driven utility that enables you to make changes to the system configuration and tailor your system to suit your individual work needs. It is a ROM-based configuration utility that displays the system's configuration status and provides you with a tool to set system parameters.

These parameters are stored in non-volatile battery-backed-up CMOS RAM that saves this information even when the power is turned off. When the system is turned back on, the system is configured with the values found in CMOS.

With easy-to-use pull down menus, you can configure such items as:

- Hard drives, diskette drives, and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power management features

The settings made in the setup program affect how the computer performs. It is important, therefore, first to try to understand all the setup options, and second, to make settings appropriate for the way you use the computer.

When to Configure the BIOS

- This program should be executed under the following conditions:
 - When changing the system configuration
 - When a configuration error is detected by the system and you are prompted to make changes to the setup program
 - When resetting the system clock
 - When redefining the communication ports to prevent any conflicts
 - When making changes to the Power Management configuration
 - When changing the password or making other changes to the security setup

Normally, CMOS setup is needed when the system hardware is not consistent with the information contained in the CMOS RAM, whenever the CMOS RAM has lost power, or the system features need to be changed.

Default Configuration


Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

Entering Setup






 





When the system is powered on, the BIOS will enter the Power-On Self Test (POST) routines. These routines perform various diagnostic checks; if an error is encountered, the error will be reported in one of two different ways:

- If the error occurs before the display device is initialized, a series of beeps will be transmitted.
- If the error occurs after the display device is initialized, the screen will display the error message.

Powering on the computer and immediately pressing allows you to enter Setup.

Press the  key to enter Setup:


Legends

Key	Function
	Moves the highlight left or right to select a menu.
	Moves the highlight up or down between sub-menus or fields.
	Exits the BIOS Setup Utility.
	Scrolls forward through the values or options of the highlighted field.
	Scrolls backward through the values or options of the highlighted field.
	Selects a field.
	Displays General Help.
	Load previous values.
	Load optimized default values.
	Saves and exits the Setup program.
	Press <Enter> to enter the highlighted sub-menu


Scroll Bar

When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

 Submenu

When “▶” appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press  .

BIOS Setup Utility

Once you enter the AMI BIOS Setup Utility, the Main Menu will appear on the screen. The main menu allows you to select from several setup functions and one exit. Use arrow keys to select among the items and press  to accept or enter the submenu.

Main


The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

System Date

The date format is <day>, <month>, <date>, <year>. Day displays a day, from Monday to Sunday. Month displays the month, from January to December. Date displays the date, from 1 to 31. Year displays the year, from 1999 to 2099.

System Time

The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

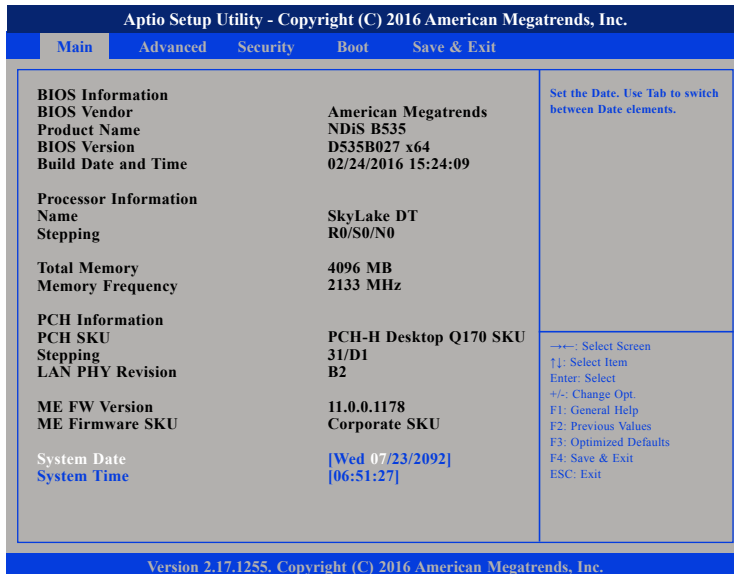

Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.

Main	Advanced	Security	Boot	Save & Exit
BIOS Information				
BIOS Vendor	American Megatrends			Set the Date. Use Tab to switch between Date elements.
Product Name	NDiS B535			
BIOS Version	D535B027 x64			
Build Date and Time	02/24/2016 15:24:09			
Processor Information				
Name	SkyLake DT			
Stepping	R0/S0/N0			
Total Memory				
Memory Frequency	4096 MB 2133 MHz			
PCH Information				
PCH SKU	PCH-H Desktop Q170 SKU			
Stepping	31/D1			
LAN PHY Revision	B2			
ME FW Version				
ME Firmware SKU	11.0.0.1178 Corporate SKU			
System Date				
System Time	[Wed 07/23/2092] [06:51:27]			

←→: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.

Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.




Setting incorrect field values may cause the system to malfunction.



ACPI Settings

This section is used to configure ACPI Settings.

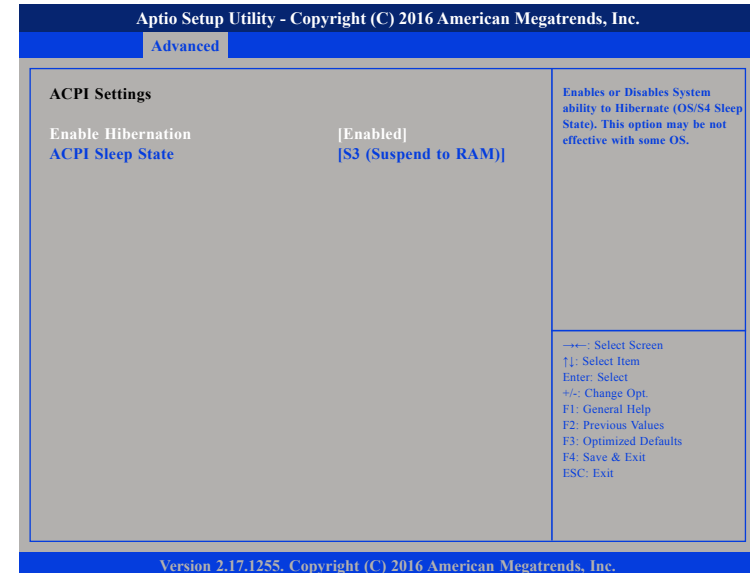

Enable Hibernation


Enables or disables system ability to hibernate (OS/S4 Sleep State). This option may not be effective with some OS.

ACPI Sleep State

Select the highest ACPI sleep state the system will enter when the suspend button is pressed. The options are Suspend Disabled and S3 (Suspend to RAM).

AMT Configuration

This section is used to configure Active Management Technology (AMT) options.

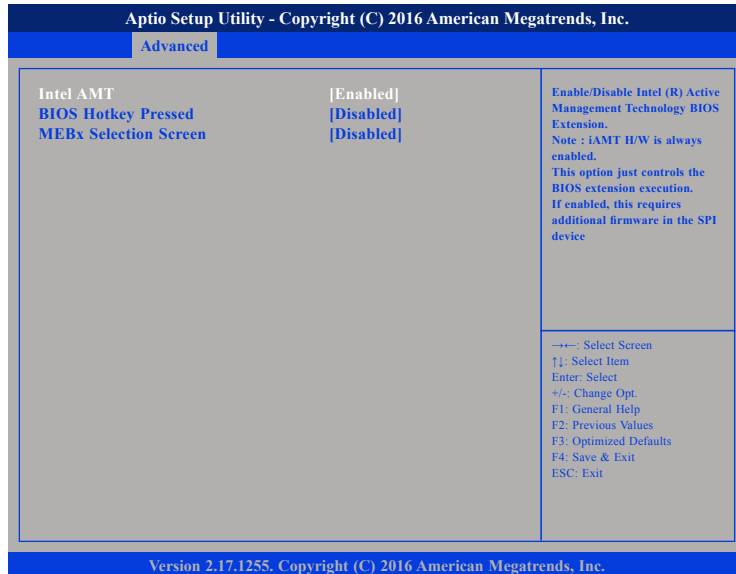

Intel® AMT

Enables or disables Intel® Active Management Technology.

BIOS Hotkey Pressed


Enables or disables BIOS hotkey press.

MEBx Selection Screen

Enables or disables MEBx selection screen.

IT8786 Super IO Configuration

This section is used to configure serial ports 1 to 5.

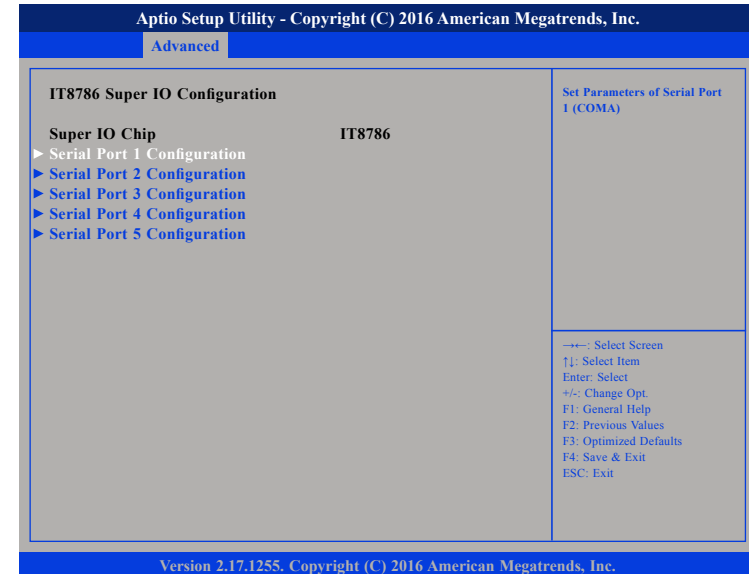

Super IO Chip

Displays the Super I/O chip used on the board.

Serial Port 1 Configuration

Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.	
Advanced	
Serial Port 1 Configuration	
Serial Port	[Enabled]
Device Settings	IO=3F8h; IRQ=4;
Enable or Disable Serial Port (COM)	
→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.	

Serial Port

Enables or disables the serial port.

Device Settings

Displays the IO address and IRQ of serial port 1.

Serial Port 2 Configuration

Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.	
Advanced	
Serial Port 2 Configuration	
Serial Port	[Enabled]
Device Settings	IO=2F8h; IRQ=3;
Enable or Disable Serial Port (COM)	
→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.	

Serial Port

Enables or disables the serial port.

Device Settings

Displays the IO address and IRQ of serial port 2.

Serial Port 3 Configuration




Serial Port

Enables or disables the serial port.

Device Settings

Displays the IO address and IRQ of serial port 3.

Serial Port 4 Configuration

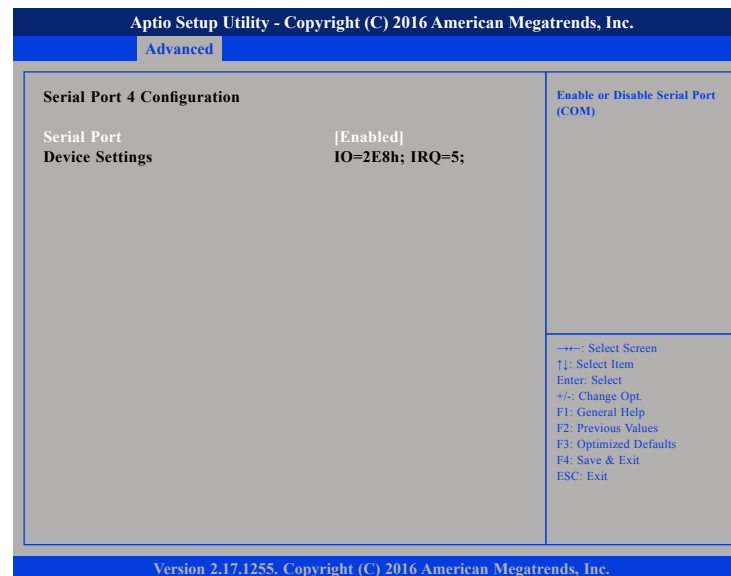

Serial Port

Enables or disables the serial port.

Device Settings

Displays the IO address and IRQ of serial port 4.

Serial Port 5 Configuration



Serial Port


Enables or disables the serial port.

Device Settings

Displays the IO address and IRQ of serial port 5.

Hardware Monitor

This section is used to monitor hardware status such as temperature, fan speed and voltages.

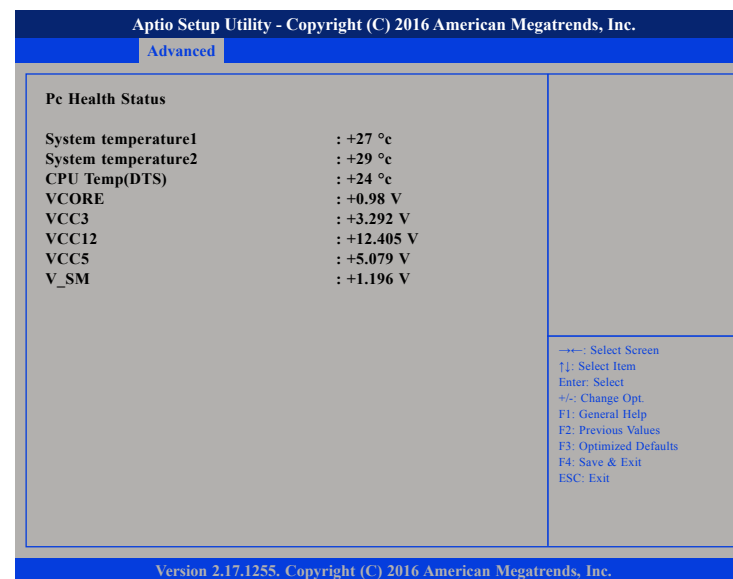

System Temperature1 to System Temperature2

Detects and displays the internal temperature of the system.

CPU Temp(DTS)


Detects and displays the current CPU temperature.

VCORE to V_SM

Detects and displays the output voltages.

RTC Wake Settings

This section is used to configure RTC Wake settings.

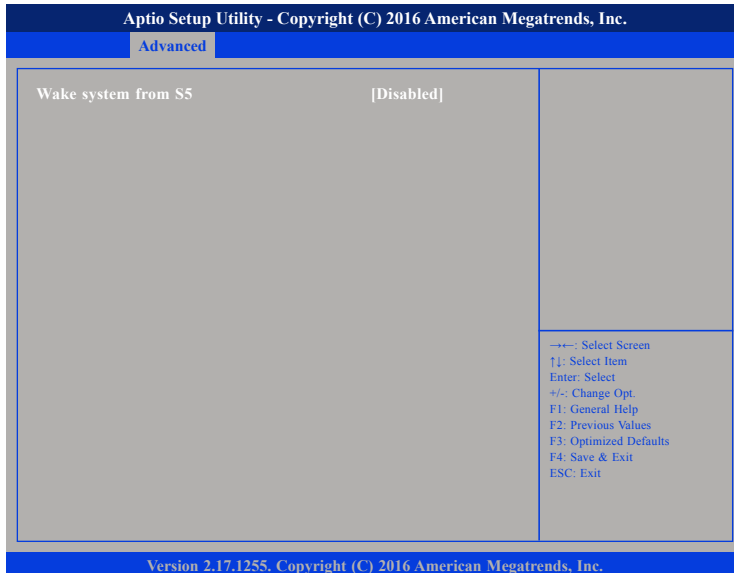


Wake System from S5

Enables or disables system wake on alarm event. When enabled, system will wake on the hr::min::sec specified.

CPU Configuration

This section is used to configure the CPU.

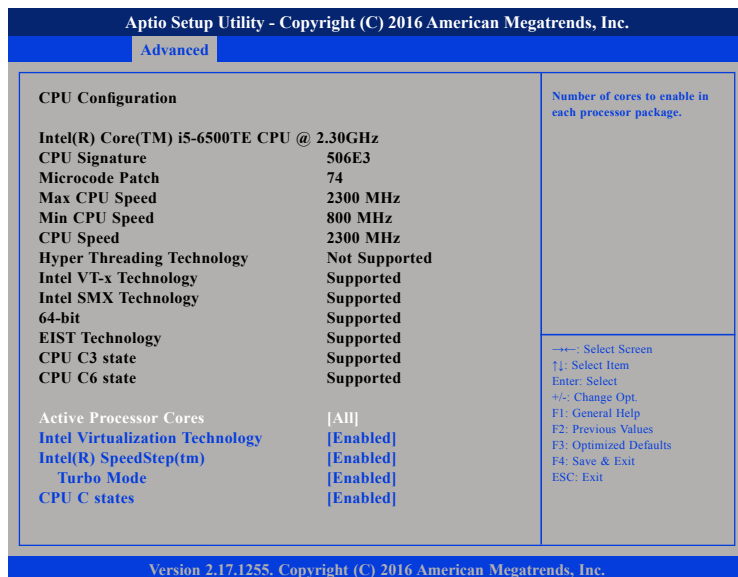

Turbo Mode

Enables or disables turbo mode.

CPU C States

Enables or disables CPU C states.

Active Processor Cores

Select the number of cores to enable in each processor package.

Intel® Virtualization Technology

When this field is set to Enabled, the VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

Intel® SpeedStep™

Enables or disables Intel SpeedStep.

SATA Configuration

This section is used to configure the SATA drives.



SATA Test Mode

Enables or disables SATA test mode.

SATA Mode Selection

Configures the SATA as AHCI or RAID mode.

AHCI This option configures the Serial ATA drives to use AHCI (Advanced Host Controller Interface). AHCI allows the storage driver to enable the advanced Serial ATA features which will increase storage performance.

RAID This option allows you to create RAID or Intel Matrix Storage configuration on Serial ATA devices.

Port 0 and Port 4


Enables or disables Serial ATA port 0 or port 4.

Hot Plug

Enables or disables hot plugging feature on Serial ATA port 0 or port 4.

Network Stack Configuration

This section is used to configure the network stack settings.

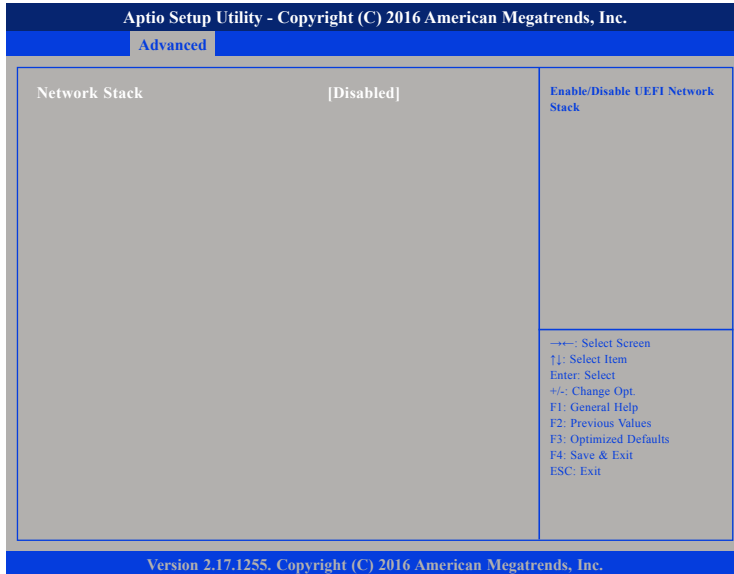


Network Stack

Enables or disables UEFI network stack.

CSM Configuration

This section is used to configure the compatibility support module features.

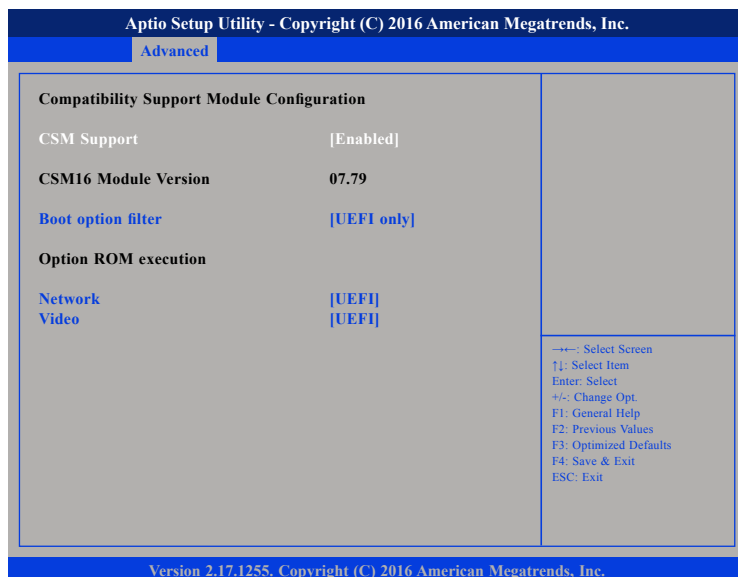

CSM Support

Enables or disables Compatibility Support Module (CSM).

Boot Option Filter

This option filters which devices system can boot to.

Network


Enables or disables the boot option for legacy network devices.

Video

Enables or disables the boot option for legacy video devices.

USB Configuration

This section is used to configure the USB.

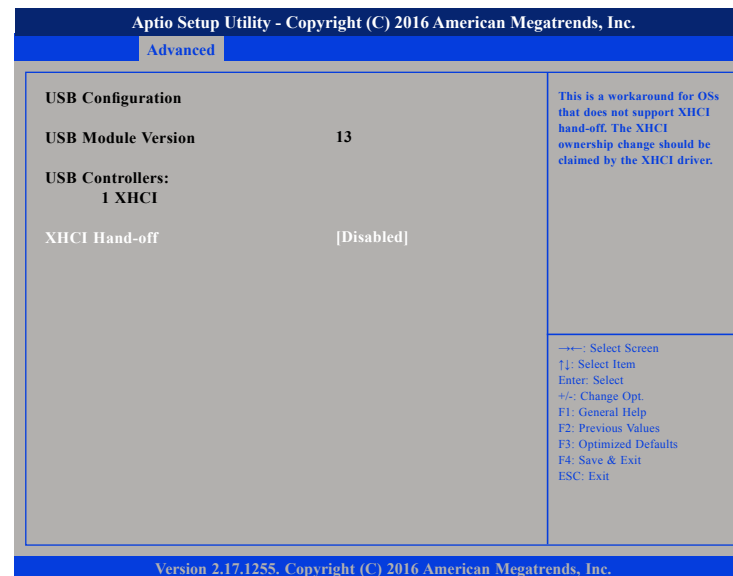

XHCI Hand-off

This is a workaround for OSs that does not support XHCI hand-off. The XHCI ownership change should be claimed by the XHCI driver.

Save & Exit



Save Changes and Exit

To save the changes and exit the Setup utility, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes. You can also press <F4> to save and exit Setup.

Discard Changes and Exit

To exit the Setup utility without saving the changes, select this field then press <Enter>. You may be prompted to confirm again before exiting. You can also press <ESC> to exit without saving the changes.

Restore Defaults

To restore the BIOS to default settings, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.

APPENDIX A: WATCHDOG TIMER

NDiS B535 features a watchdog timer that resets the CPU or generates an interrupt if the processor stops operating for any reason. This feature ensures system reliability in industrial standalone or unmanned environments.

Watchdog Timer Control Register (Index=71h, Default=00h)

Bit	Description
7	WDT is reset upon a CIR interrupt.
6	WDT is reset upon a KBC (Mouse) interrupt.
5	WDT is reset upon a KBC (Keyboard) interrupt.
4	Reserved
3-2	Reserved
1	Force Time-out This bit is self-cleared.
0	WDT Status 1: WDT value is equal to 0. 0: WDT value is not equal to 0.

Watchdog Timer Configuration Register (Index=72h, Default=001s0000b)

Bit	Description
7	WDT Time-out Value Select 1 1: Second 0: Minute
6	WDT Output through KRST (pulse) Enable 1: Enable 0: Disable
5	WDT Time-out Value Extra Select 1: 64ms x WDT Timer-out value (default = 4s) 0: Determined by WDT Time-out value select 1 (bit 7 of this register)
4	WDT Output through PWRGD Enable 1: Enable 0: Disable <i>During LRESET# this bit is selected by JP2 power-on strapping option.</i>
3-0	Interrupt Level Select for WDT Please refer to Interrupt Level Mapping Table.

Watchdog Timer Time-out Value (LSB) Register (Index=73h, Default=38h)

Bit	Description
7-0	WDT Time-out Value 7-0

Watchdog Timer Time-out Value (MSB) Register (Index=74h, Default=00h)

Bit	Description
7-0	WDT Time-out Value 15-8

SMI# Control Register 2 (Index=F1h, Default=00h)

Bit	Description
7	Reserved
6	0: Edge trigger 1: Level trigger
5-3	Reserved
2	This bit enables the generation of a SMI# due to WDT's IRQ (EN_WDT).
1	This bit enables the generation of a SMI# due to CIR's IRQ (EN_CIR).
0	This bit enables the generation of a SMI# due to PBD's IRQ (EN_PBD).

Watchdog Programming Guide

```

#define SUPERIO_PORT  0x2E
#define WDT_SET       0x72
#define WDT_VALUE     0x73

void main(void)
{
    #Enter SuperIO Configuration
    outportb(SUPERIO_PORT, 0x87);
    outportb(SUPERIO_PORT, 0x01);
    outportb(SUPERIO_PORT, 0x55);
    outportb(SUPERIO_PORT, 0x55);

    # Set LDN
    outportb(SUPERIO_PORT, 0x07);
    outportb(SUPERIO_PORT+1 ,0x07);

    # Set WDT setting
    outportb(SUPERIO_PORT, WDT_SET);
    outportb(SUPERIO_PORT+1, 0xC0);

    # Set WDT sec/min
    outportb(SUPERIO_PORT, WDT_VALUE);
    outportb(SUPERIO_PORT+1, 0x05);
}

```

Use the second
Use the minute,
change value to 0x10

Set 5 seconds