

Version 1.0, February 2017

What's in the Box?

In addition to this guide, the package includes the following items:



<u>M3x6L Screw * 4</u> 44 mm DIN-Rail Clip * 1

Screw Driver 2.4 mm

Pin Terminal * 16

Technical Support

WP-5000-CE7 User Manual

CD:\WinPAC_AM335x\Wp-5231\Document\ http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/document/



Connecting to PC, Monitor and Power Supply

- i. Connect the mouse or keyboard to the USB port.
- ii. Connect PC to the Ethernet port through an Ethernet switch.
- iii. Connect the monitor to the VGA port.
- iv. Connect the power supply (+12 to +48 V_{DC}) to PWR and GND terminals, and then turn on the WinPAC.





Step 1: Double-click the PAC Utility shortcut on the desktop



Step 2: Configure IP address (DHCP), FTP Server, Auto Execution files..., etc



Step 3: Reboot the WinPAC for changes to take effect

File	Help				
Save	3				
Save and Reboot					
<u>R</u> eboot					
Restore Utility Default Settings					
E <u>x</u> it					

4 Changing the User Interface Language

Step 1: Click Start menu, point to Settings, click Control Panel, and then click Regional Settings

🖻 Programs	٠		
🔆 F <u>a</u> vorites	۲		
Documents	٠		
😼 <u>S</u> ettings	×	🚰 <u>C</u> ontrol Panel	
🖅 <u>R</u> un		📚 Network and Dial-up Connections	Regional
🛃 Start		🛃 <u>T</u> askbar and Start Menu	Settings

Step 2: Click User Interface Language tab, choose to your local language, and then click OK



Step 3: Run the PAC Utility, and then reboot the WinPAC for changes to take effect



5

Inserting and Wiring to the XV-Board

XV-Board expansion I/O modules are used to expand the functions of the WP-5231M-CE7.

For more details about XV-Board expansion I/O modules, please refer to <u>http://www.icpdas.com/root/product/so</u> <u>lutions/hmi touch monitor/touchpad/xv</u> <u>-board selection.html</u>

